# Specification

Model	LVDF452FM		
Pick up Element	1/3"CMOS		
Effective Picture Elements (H×V)	720(H)X576(V)		
Horizontal Resolution	800TV Line		
Minimum Illumination	0.01Lux/F1.2		
S/N Ratio	More than 50dB		
Scanning System	2:1 interlace		
Synchronous System	Internal, Negative sync.		
Auto Electronic Shutter	NTSC:1/60s~1/100, 000s,PAL:1/50s~1/100,000s		
Gama Characteristic	0.45		
IR Distance	25 Meters (with ¢ 5X30 Unit Infrared LED)		
IR Status	Under 10 Lux by CDS		
IR Power On	CDS AUTO Control		
Video Output	1Vpp,75 Ω		
Auto Gain Control	Auto		
Power/Current	12VDC(+/-10%)/ 400mA		
Lens	2.8-12 Manual Zoom Lens		
Dimension (mm)	⊄ 140 x 110(H)		
Weight (g)	1200		
Storage Temperature	-30~ +60℃ RH95% MAX		
Operating Temperature	-10~ +50℃ RH95% MAX		

## Packing List

No	Name	Model	Number
1.	Vandalproof IR Dome Color Camera	LVDF45FM	1
2.	User Guide	LVDF45FM	1

# DANG MINH CONSULTANT & INVESTMENT (DMC) PTY LTD

#### Australia Office:

358 Summers road, Riverhills Queensland 4074T: +61 45 246 1970E: dmc.au@dmc.vnW: http://www.dmcbuildingsupplies.com.au



# LVDF45FM Color Camera

### Vandalproof IR Dome Color Camera



Notes: Before providing power for the camera, please read this User Guide in detail!

Do not attempt to disassemble the camera. If the camera can not work, please contact local franchiser or our company.

#### BRIEF OF PRODUCT

Adopt CMOS 1/3" Sensor.

\* Auto Electronic Shutter (AES)

Camera Gama characteristic is 0.45.

Built-in auto gain control (AGC) circuit. The color camera

can get high definition picture in low Lux condition.

Built-in auto electronic shutter function. The color camera's AES speed can reach 1/100,000s.

\* Auto Gain Control (AGC)


\* Gama Characteristic

NTSC or PAI mode.

\* Scanning Mode

\* Sensor

## CONNECTING

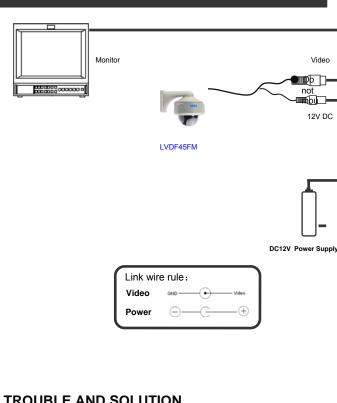

### TROUBLE AND SOLUTION

- 1. No Picture after providing power
- supply voltage and pole whether exactitude.
- correctly or not.

#### 2. The picture level direction have flowing interference ripples

- . May be caused by the power supply AC ripples, it need filter the wave of the power supply.
- . Check the monitor and peripheral equipments used.

#### 3. The picture background color changes continuously

- . The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras.
- . Reduce the fluorescent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it.
- . Use power supply external sync. camera can solve it.

#### 4. The picture smear too mass

- . The power supply's voltage unstable.
- . Connecting cables not connect correctly or have high impedance.

### INTRODUCTION



Congratulations on your purchase of this product. This User Guide suits LVDF45FM product. We adopt the latest CMOS technical of sensor and driver. The most attractive characteristics are small and easy hidden, suits the elevator and corridor. In addition, it owns the characters of high definition and stability, strong anti-jamming, rich and real color. Fixing and using this model are convenient too. It is very good for you to apply to yours CCTV system.

Please read this instruction manual carefully to ensure proper use of the product.



To prevent fire or shock hazarded. Do not expose the unit to rain or moisture.

The symbol is intended to alert the user to the presence of important operating and maintenance (servicing) Instructions in the literature accompanying the appliance.

> The symbol is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient Magnitude to constia risk of electric shock to persons.





Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating temperature is -30~

+60 °C. (Recommendatory operating temperature is −10~ +50℃.)

• Never make the camera face the sun or bright object. Otherwise, it will damage the CCD.

## Notes:

- The power supply must through safe attestation. Its output voltage, current, voltage polarity and operating temperature must match the camera's requirement.
- •When using the camera in the thunderbolt condition, please note to mount Anti-thunder device or put off the power supply plug and cable.
- In order to capture high quality pictures, the power supply's cable and video output cable should not be too long.



- . May be the power supply voltage abnormity, please check the power
- . Please check all the connecting cable and monitors whether be connected